

AC850 ACRYLIC NIR LONGPASS FILTER

MidOpt Acrylic Longpass Filters

Acrylic Longpass Filters are a durable, lightweight and economical solution for inspection windows. They can protect a lens in environments where broken glass might pose a problem.

Acrylic Longpass Filter Information

- High transmission ranging from 90 to 98%
- Available with an anti-reflection coating for maximum transmission
- Optical-grade acrylic
- Impact-resistant
- Half the weight of glass



Acrylic Longpass Filters Applications

Acrylic Longpass Filters are frequently used for lens protection and economical enclosure windows, as well as over light sources to control the wavelength emission of broad spectrum light sources. Because of their durability, they're commonly used in Food & Drug Administration (FDA) and European Food Safety Authority (EFSA) regulated applications where glass over the inspection area is not permitted. AC370 and AC380 offer antiabrasion, anti-reflection coating, which can also withstand harsh solvents such as alcohol, acetone or MEK.















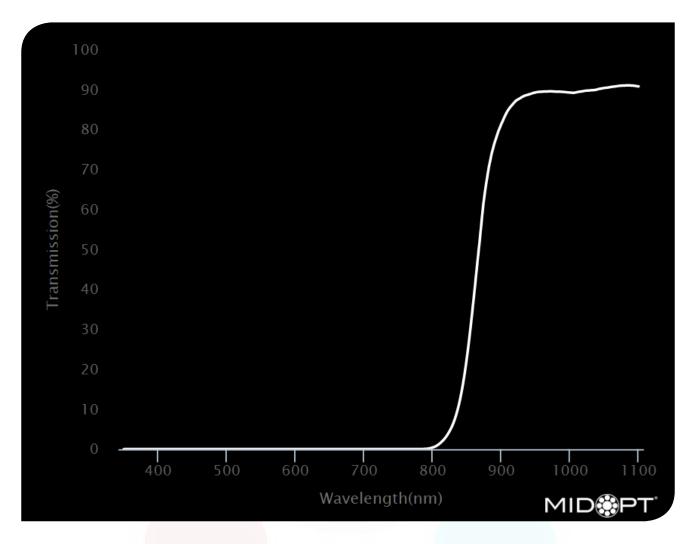

Useful Range:	880-1100nm	
Cut-on Wavelength 50% T:	855nm	
Tolerance:	+/- 10nm	
Peak Transmission:	≥90%	
Surface Quality:	80/50	
STABLEDGE:	Yes	

AC850 is similar to AC800 IR Pass/Visible Block acrylic sheet except that it blocks further into the near IR. It is available both with and without scratch-resistant hard coating and is very well suited for use with 880nm and 940nm LED illumination, or in situations where visible light emitted by arc/flash lamps needs to be blocked while near-IR light is passed. AC850 material is custom cut from 3mm thick sheets according to customer requirements and is supplied with a removable protective overlay material. Orders for

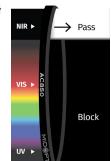

AC850 material are most often shipped "next day". Other thicknesses are available on request.

*Not available in 1mm thickness or standard 25.4™ C-Mount option. For filters thicker than 1mm, we offer an alternative mounting solution that has an overall thickness of 5.5mm. This mount can accommodate filters up to 3.5mm thick. To view this alternative C-Mount option, click here.







AC850 TRANSMISSION DATA (TYPICAL)

Wavelength (nm)	Transmission (%)		
1100	90.85		
1090	91.05		
1080	91.08		
1070	90.94		
1060	90.71		
1050	90.47		
1040	90.10		
1030	89.86		
1020	89.69		
1010	89.39		
1000	89.31		
990	89.47		
980	89.53		
970	89.63		
960	89.54		
950	89.34		
940	88.84		
930	88.19		
920	87.02		
910	84.94		
900	81.42		
890	76.60		
880	68.66		
870	54.79		
860	38.06		
850	23.06		
840	12.51		
830	6.46		
820	3.23		
810	1.38		
800	0.43		

Wavelength (nm)	Transmission (%)		
790	0.10		
780	0.05		
770	0.04		
760	0.04		
750	0.05		
740	0.05		
730	0.04		
720	0.04		
710	0.04		
700	0.04		
690	0.04		
680	0.04		
670	0.04		
660	0.04		
650	0.03		
640	0.03		
630	0.04		
620	0.04		
610	0.03		
600	0.03		
590	0.04		
580	0.03		
570	0.03		
560	0.03		
550	0.04		
540	0.03		
530	0.04		
520	0.04		
510	0.03		
500	0.03		
490	0.03		

Wavelength (nm)	Transmission (%)		
480	0.04		
470	0.03		
460	0.03		
450	0.03		
440	0.03		
430	0.03		
420	0.03		
410	0.04		
400	0.03		
390	0.03		
380	0.03		
370	0.03		
360	0.03		
350	0.03		









STANDARD THREADED MOUNT DIMENSIONS

NOTES:

- 1. Inner and outer threads are of the same size and pitch.
- 2. Filter mount and retaining ring are black anodized aluminum.
- 3. All dimensions indicated in mm.
- 4. Tolerance: +/-0.3mm.

Mount Size	A	В	С	D
M13.25 x P0.5	14.3	10.6	7.5	5.7
M22.5 x P0.5	24	18.5	7	5.2
M25.5 x P0.5	27.5	21	7	5.2
M27 x P0.5	29	22.5	7	5.2
M30.5 x P0.5	32.5	25.5	7	5.2
M34 x P0.5	36	29	7	5.2
M35.5 x P0.5	37.5	30.5	7	5.2
M37 x P0.75	39	31.9	6.5	4.5
M37.5 x P0.5	39.5	32.5	7.2	5.2
M39 x P0.5	41	34	7	5.2
M40.5 x P0.5	42.5	35.5	7	5.2
M43 x P0.75	45	38	7	5.2
M46 x P0.75	48	41	7	5.2
M48 x P0.75	50	43	7	5.1
M49 x P0.75	51	44	7	5.2
M52 x P0.75	54	47	7	5.2
M55 x P0.75	57	50	7	5.2
M58 x P0.75	60	52.9	6.5	4.5
M62 x P0.75	64	57.1	7	5.2
M67 x P0.75	70	61.8	6.5	4.5
M72 x P0.75	75	66.9	6.5	4.5
M77 x P0.75	80	71.9	6.5	4.5
M82 x P0.75	85	76.8	6.5	4.5
M86 x P1.0	89	80.8	6.5	4.5
M95 x P1.0	98.2	89.9	10	7.1
M105 x P1.0	109.8	100	11	8

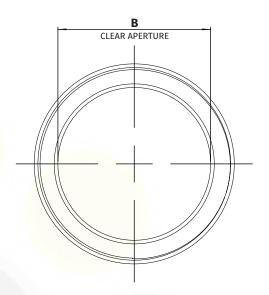

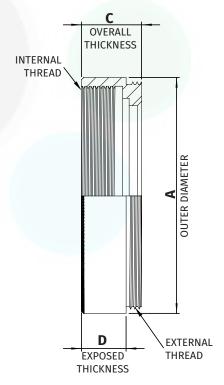








[©] Midwest Optical Systems – Rev 1/2016

Acrylic Filters




C-MOUNT DIMENSIONS (-25.4)

C-Mount is available on filters with a substrate thickness of 1mm or less

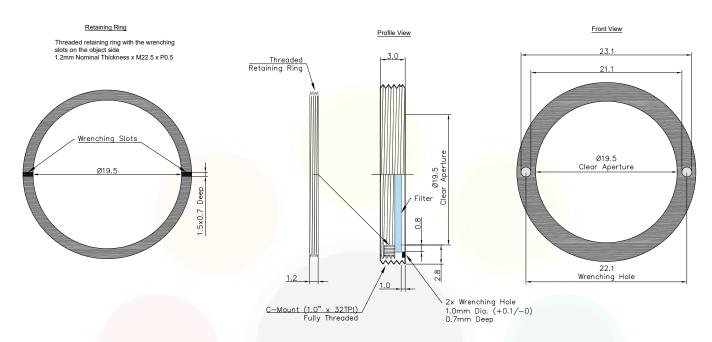

C-MOUNT SIS DIMENSIONS (-25.4-SIS)

C-Mount SIS is available on filters with a substrate thickness greater than 1mm and less than or equal to 3.5mm

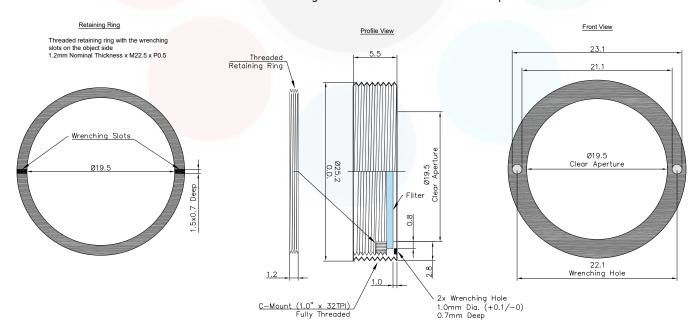



Acrylic Filters



Mount Sizes

Pitch

0.5

0.5

0.5

0.5

0.75

0.5

0.5

0.75

0.75

0.75

0.75

0.75

0.75

0.75

0.75

0.75

0.75

0.75

1.0

1.0

1.0

> THREADED Mount Size

M13.25 0.5

M22.5 0.5

M25.5

M27

M30.5 M34

M35.5

M37.5

M40.5

M43

M46

M48

M49

M52

M55

M58 M62

M67

M72

M77

M82

M86

M95

M105

C-MOUNT

M25.4™

SLIP MOUNT Outside Diameter

19.1-26.5 M30.5

26.6-31.9 M40.5 32.0-40.9 M46

41.0-50.9 M55

51.0-57.9 M62 58.0-68.0

79.1-101.0 M105

UNMOUNTED **Custom Shapes** & Sizes Available

M12 MOUNT

13.2-14.2 S14A 14.3-15.0 S15A

Outside Diameter Range

M72 68.1-79.0 M82

Range

15.1-19.0

M39

M37

MOUNTS FOR ANY SYSTEM













Midwest Optical Systems is the world's leading resource in machine vision filters and optical solutions. MidOpt's innovative filter designs ensure flawless control, dependable results and unmatched image quality. Mounting solutions are available for any system for lenses with and without filter threads, the exclusively designed 25.4™ C-Mount, and custom fabrication of unmounted shapes and sizes.



> THREADED MOUNT Designed for Lenses with Filter Threads

- · MidOpt offers the largest variety of filters in-stock and ready to ship
- Sizes available: M13.25-M105
- Black anodized aluminum
- Custom thread sizes are available upon request

CREATE PART #: Select a filter and add a mount size (e.g. M27) Example: BP470-27



> 25.4™ C-MOUNT Threads into all C-Mount Cameras

- 25.4™ C-Mount Camera Filter exclusively designed by MidOpt to thread directly into any C-Mount Camera between the lens and sensor
- Recommended for use with wide angle lenses to prevent vignetting and angle shift
- Helpful in applications with space constraints and lenses without filter threads
- Custom installation wrench included

CREATE PART #: Select a filter and add "-25.4" Example: BP470-25.4



> SLIP MOUNT Designed for Wide Angle Lenses Without Filter Threads

- Accommodates standard threaded mounts
- Low profile and oversize diameter design prevents wide angle lens vignetting
- Includes black Delrin® Slip Mount adapter plus Threaded Mount Filter

CREATE PART #: Select a filter, use "S" for slip and add the outside diameter of lens in mm (e.g. 43mm) Example: BP470-S43



UNMOUNTED

- Any MidOpt filter type can be provided as an Unmounted Filter
- Custom shapes and sizes are typically available within a two week lead time with many shipped same day

CIRCLE: Use "D" and add diameter in mm (e.g. 19mm) Example: BP470-D19 SQUARE: Use "R" and add side measurement in mm (e.g. 15mm) Example: BP470-R15 **RECTANGLE:** Use "R" and add length in mm (e.g. 30mm) x width in mm (e.g. 15mm) Example: BP470-R30x15



> CUSTOM SOLUTIONS FOR M12 MOUNT LENSES

- · Offered in aluminum slip mount over the lens
- Can be optically cemented behind the lens

HOW TO ORDER

To order a filter with a threaded mount, first select a filter (e.g. BP470) and add the mount size (e.g. M27) to build your part number (e.g. BP470-27).









MIDOPT STABLEDGE®

Minimize the Effects of Short Shifting

MidOpt StablEDGE® optical filters are specifically designed to be less susceptible to effects from angular shifting seen when optical filters are placed in front of short focal length (<12mm) camera lenses. This feature is becoming increasingly important as today's trend in machine vision imaging progresses towards more compact inspection layouts, which utilize less space - forcing the camera and lens closer to the subject. As a result, short focal length lenses are now more widely used than ever before.

Using a traditional coated interference filter in these more compressed configurations results in contrast loss toward the edges of the image. Because of the angle imposed by the field of view (FOV) of the lens, the passband shifts and allows short wavelength ambient light to overwhelm the subject. Light from LED or laser diode lighting is also cut off. In contrast, peak transmission of MidOpt's StablEDGE® filters is not significantly altered, and effects due to short shifting are minimized.



StablEDGE® filters take advantage of absorptive filter glass to form the leading edge of the filter passband. This assures no shifting in this region, even when the lens FOV exceeds 100°. Filter glasses also offer far superior lower wavelength blocking of ambient light, sharp transition slopes and unmatched durability. MidOpt's StablEDGE® Filter cut-off slopes utilize interference filter coatings, however the cut-off slope is positioned to be sufficiently broad, and the Gaussian passband profile ensures that excessive ambient light is not allowed to degrade image contrast. Thus, shifting will not significantly encroach into peak transmission, assuring angular insensitivity over the desired range.

Among all machine vision filter manufacturers, MidOpt is unique in incorporating StablEDGE® technology across a full range of products. StablEDGE® designs are less angle-of-incidence sensitive, inherently more rugged, and are environmentally stable.







